

CrashGuard™ CG421


mic isolator for Sennheiser® MD 421

USER GUIDE

Thank you and congratulations on purchasing the Primacoustic CrashGuard™ CG421! Please take a few minutes to read through this manual. The CG421 is designed to surround a Sennheiser® MD421 microphone on three sides to attenuate the sound of nearby cymbals or hi-hat during the recording process. This attenuation allows the engineer to capture the drum sound without having too much extra sound bleeding into the recording. Please refer to www.primacoustic.com for various placement options, benefits, and general information. Should you have any questions or comments, we invite you to send us an email at info@primacoustic.com.




Mounting Position A:

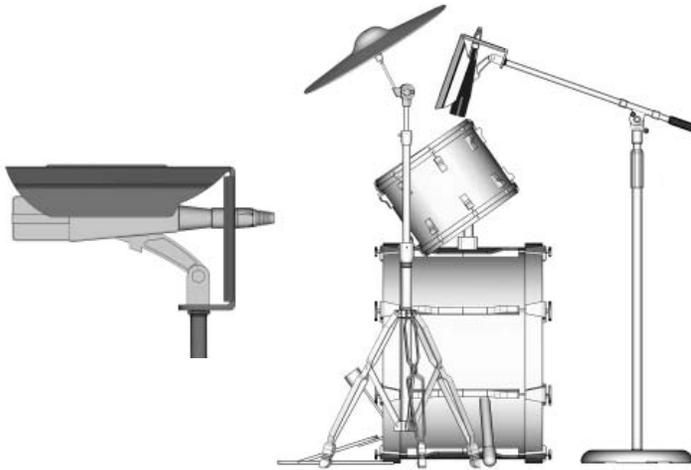

The CG421 is designed to fit any standard boom arm. Begin by taking the mic clip off your mic stand boom arm. Make sure you leave the knurled ring on that usually comes with most booms. The CG421 comes equipped with a spare ring in case you do not have one. Push the CG421 onto the boom arm then screw the mic clip onto the boom. Do not over tighten. Connect the mic by passing the cable through the rear access port. The mic may be articulated up and down. Leave some space between the mic head (capsule) and the inside of the CG421. This will reduce any effect the shell may have on the mic's polar pattern.

Mounting Position B:

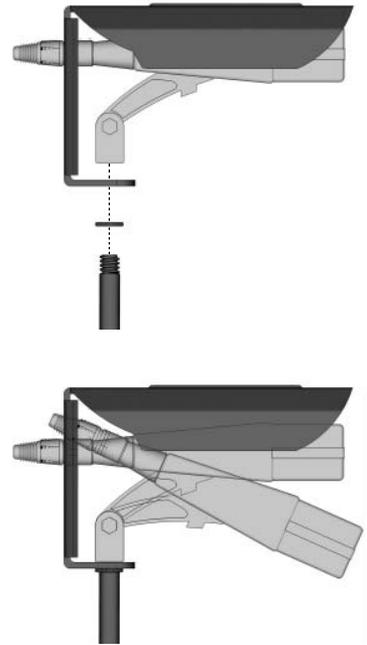

LIMITED WARRANTY

Primacoustic products are guaranteed to be free of manufacturing defects for a period of thirty (30) days after purchase. In the unlikely event that a defect is uncovered, please email info@primacoustic.com or call 604-942-1001 to obtain a return authorization number (RA#) from Primacoustic before the thirty (30) day warranty period expires. Once you have obtained an RA number return the product, freight prepaid, within fifteen (15) days after the date the RA number is issued. In the original packaging (or another, affording an equal degree of protection) include all of the following: (1) RA number clearly marked on the returned package; (2) a copy of the original bill of sale showing proof of purchase from an authorized retail seller; and (3) a written note describing the defect including your name, address, telephone number, email address and the applicable RA number. You are solely responsible for all shipping and insurance costs for returning the product to Primacoustic, and you will not be reimbursed or compensated for any loss or damage incurred. Primacoustic will at its discretion repair or replace the product. Should the product be no longer available, Primacoustic reserves the right to exchange this with a product of similar performance and value. This Warranty shall solely extend to the original owner and is limited to manufacturing defects only and excludes damage due to improper installation, freight handling, wear and tear, abuse, misuse, misapplication, color fading or deterioration due to prolonged exposure to ultra violet light, smoke, humidity or other environmental factors. It is understood that the use and suitability of the product is entirely the responsibility of the buyer and as such, these parties agree to hold Primacoustic, or its associated company, and/or officers, harmless from any responsibility whatsoever other than what is clearly outlined in this warranty. This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live and where the product was purchased.