INSTALLATION MANUAL

Congratulations on purchasing Primacoustic Broadway. Broadway is a series of fabric covered, high density, (6 lb per cubic foot) rigid glass wool panels designed to control echo and absorb secondary reflections in any reverberant environment. Because Broadway panels are also Class-1 fire rated, they are ideally suited to provide effective acoustic control in applications as diverse as home-theatre, practice rooms, houses of worship, offices, call centers and broadcast studios.

Please take a few minutes to read this installation manual. It will give you step by step instructions on the installation of Broadway panels, performance specifications, and safety data. Should you have any questions or comments, we invite you to send an email to: info@primacoustic.com.

HOW MANY PANELS DOES YOUR ROOM REQUIRE?

Although there are no set rules on how much treatment should be used, it is obvious that the more treatment you install, the more sound will be absorbed. Maximum effectiveness is achieved when panels are placed in corners where two walls meet, or where a wall and ceiling join. Ultimately, the amount you install and where it goes will also depend on factors such as windows, architectural demands and your room's intended purpose.

APPROXIMATE WALL COVERAGE REQUIRED BY ROOM TYPE:

10% - Budget: Echo reduction, general purpose coverage

15% - Light: Live music room, board room, commercial buildings, industrial spaces 25% - Normal: Recording studio tracking room, home theatre, music practice room

35% - Medium: Recording studio control room, on-air broadcast studio

45% - Dark: Noise control, voice-over booth

* Approximate figures only. Please consult a professional Acoustician for specific design parameters






Primacoustic Impaler Clip

Step 1: Use level to mark top line. Step 2: Repeat for set line.

HOW MANY IMPALERS?

How many impaler clips to use per panel is up to you depending on the size of the Broadway panels you have selected and the degree of security you feel you need. The chart below shows the suggested number of impaler clips for the different Broadway panels sizes. Impalers should be placed approximately four to six inches from the edge of the panel to clear the fabric. Avoid pushing the impalers through the fabric edge. When mounting Broadway panels in overhead locations apply a golf-ball sized dab of construction adhesive to each Impaler to prevent accidental dislodgement.

	Scatter Block	Control Cube	Control Column	Broadband Panel
1 inch panels	1	2	2	3
2 inch panels	-	-	2	4
3 inch panels	-	-	3	4

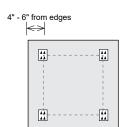


Step 3: Impaler clip locations

INSTALLING WITH PRIMACOUSTIC IMPALERS

Primacoustic Impalers are designed to provide the installer with a simple and effective method of mounting Broadway panels onto walls. The mounting clips feature a series of sharp impaling heads that penetrate the panels for secure semi-permanent mounting without causing serious wall surface defacement.

Tools: You will need a bubble level, 48" straight edge, measuring tape, drill, screwdriver, wood screws and for mounting on standard drywall we recommend using plastic drywall anchors.



Step 2: Lightly mark panel locations along the TOP line by carefully measuring out each panel width. If you are planning to space panels apart include the gap measurement and mark points along the TOP line identifying panel edge and gap points.

Step 3: Mark wall locations for the impaler clips by measuring 4 to 6 inches down from your TOP line and 4 to 6 inches in from your panel edges. Secure impaler clips with an appropriate fastener for your wall surface. For additional security apply a golf-ball sized dab of construction adhesive to each Impaler. This will prevent the panel from being easily removed once the adhesive is dry.

Step 4: Tilt the panel so just the top edge is touching the wall. Carefully line up the top edge with the SET line and edge marks you made in step 1 and 2. Placing a level on top of the panel will help you keep it straight as you guide it onto the impaler clips.

Step 5: Once you have lined up the panel squarely on the SET line, bring the back of the panel in contact with all of the impaler clips. Apply pressure in and down onto the clips. The panel will slide onto the Impalers and sink down about one inch. Use the TOP pencil line to confirm placement is level. If alignment is off, the panel may be nudged up to ½" to make it level.



Step 4: Level panel on Set line

Step 5: Even downward pressure



WARNING: The installation methods outlined are recommendations only. Please seek professional advice if you are unsure about any of these methods




ACOUSTICAL DATA

Broadway panels have been tested in conformance of the ASTM standard test method for sound absorption and sound absorption coefficients by the Reverberation Room Method ASTM C423-02a and E795-05. Increased performance can be achieved by panel location and different mounting options.

SOUND ABSORPTION DATA (NRC) ASTM C423-90a Octave Band Frequencies (Hz)

Panel Thickness	125Hz	250Hz	500Hz	1kHz	2kHz	4kHz	NRC
1" Thick	0.17	0.28	0.81	1.00	1.02	0.95	0.80
2" Thick	0.45	0.83	1.07	1.00	1.01	1.00	1.00
3" Thick	0.92	0.91	1.00	1.00	1.02	1.03	1.00

^{*} Actual test data provided by Riverbank Acoustical Laboratories

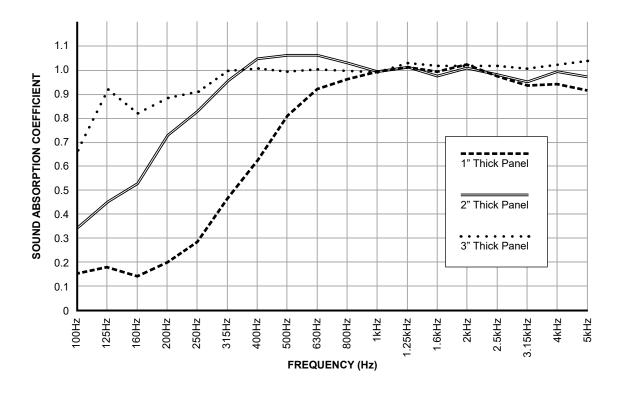

FIRE SAFETY

Broadway panels have been tested to meet the most stringent ASTM and CSA testing requirements for the USA and Canada. For international customers, please consult your local building authority for proper cross-compatibility specifications.

BROADWAY FIRE & BURN TEST CHARACTERISTICS

TEST CLASS		FLAME SPREAD	SMOKE DENSITY	
ASTM E 84	1 OR A	15 FSI	155 SD	
CAN/UL-S102	1 OR A	15 FSCI	155 SD	

^{*} Actual test data provided by Bodycote Materials Testing Inc.

WARRANTY

Please inspect products immediately after receiving your purchase. Primacoustic acoustic products are guaranteed to be free of manufacturing defects for a period of 3 years after purchase. In the unlikely event that a defect is uncovered, please call 604-942-1001 to obtain a RA number (Return Authorization number) from Primacoustic before the 3 year warranty period expires. Once you have obtained a RA number you must return the product, freight prepaid, within fifteen (15) days after the date the RA number is issued. Please return the product in the original packaging (or another, affording an equal degree of protection) with all of the following: (1) RA number clearly marked on the returned package; (2) a receipt or bill of sale showing proof of purchase from an authorized seller; plus (3) a letter describing the defect. Please include your name, address, telephone number and the applicable RA number. You are solely responsible for all shipping and insurance costs for returning the product to Primacoustic, and you will not be reimbursed or compensated for any loss or damage incurred during return shipping. Primacoustic will at its sole discretion repair or replace the product. Should the product no longer be available, Primacoustic reserves the right to exchange this with a product of similar performance and value. Due to different dye lots, Primacoustic cannot guarantee exact color match. This Warranty shall solely extend to the original owner and is limited to manufacturing defects and excludes damage due to improper installation, freight handling, wear and tear, abuse, misuse, misapplication, color fading or deterioration due to prolonged exposure to ultra violet light, smoke, humidity or other environmental factors. It is understood that the use and suitability of the product is entirely the responsibility of the buyer or specifying engineer and as such, these parties agree to hold Primacoustic, or its associated company, and/or officers, harmless from any responsibility whatsoever other than what is clear



